
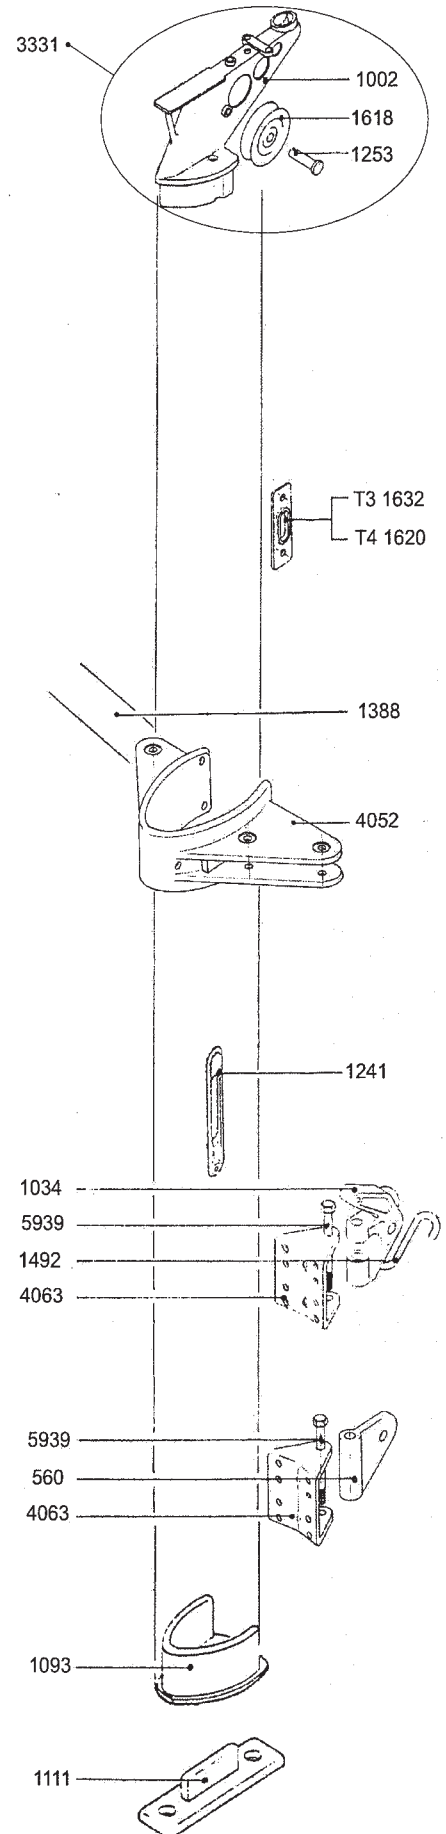


# MASTS

## Z 145

## Z 145 TAPER
















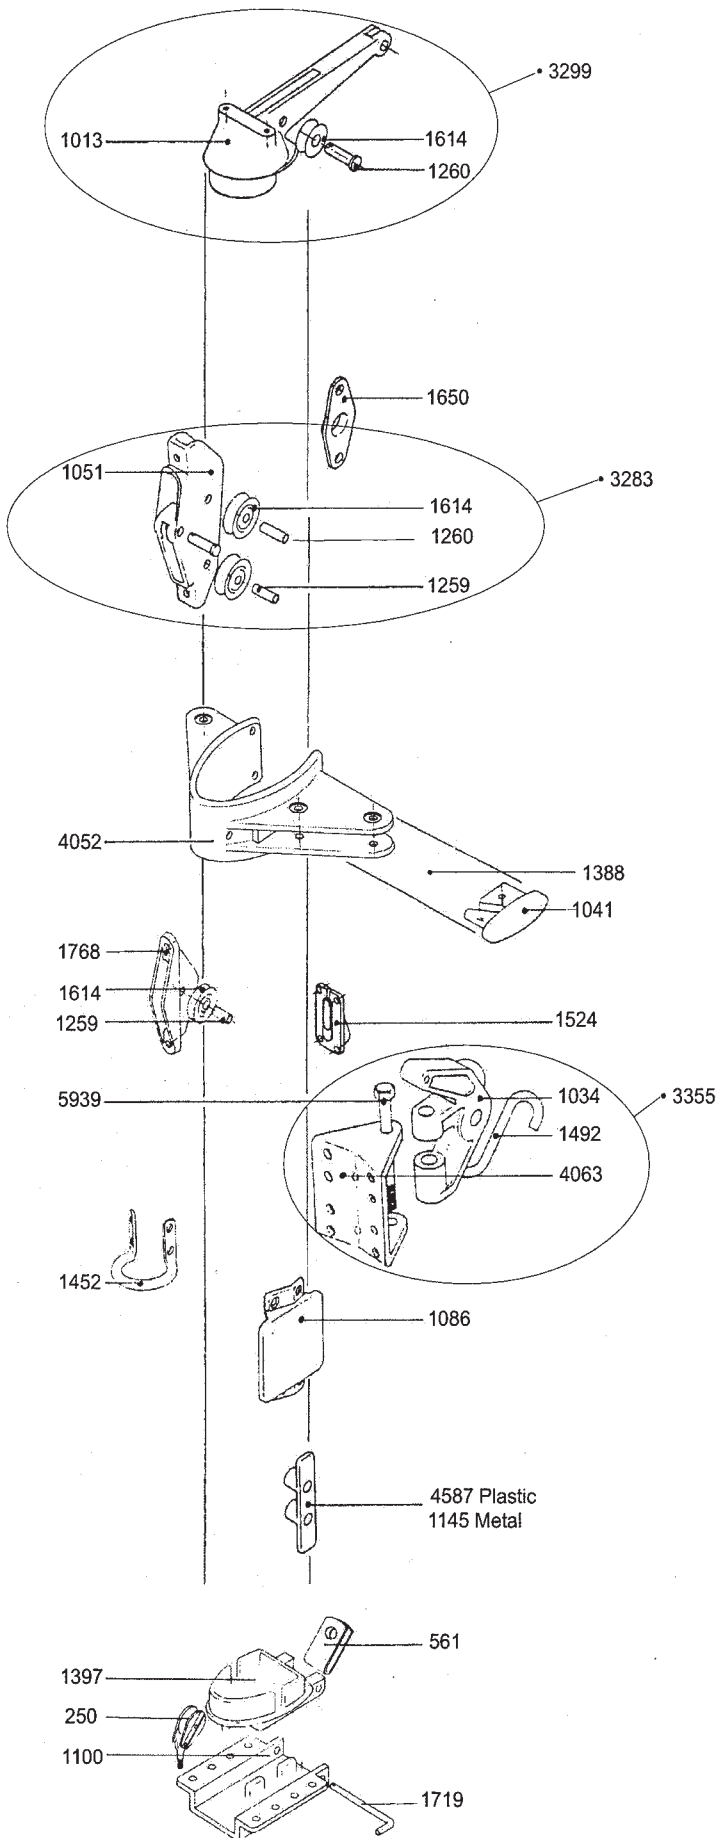


# MASTS


Z 170

Z 170 7/8

Z 170 Taper

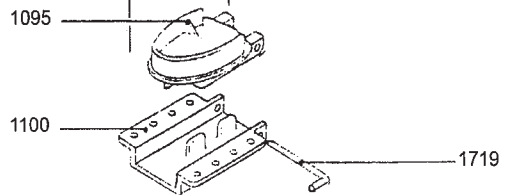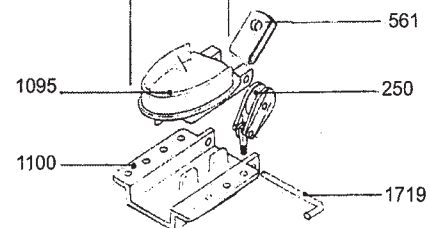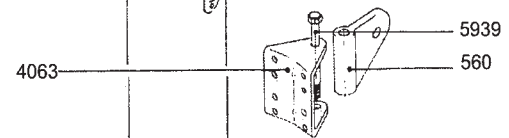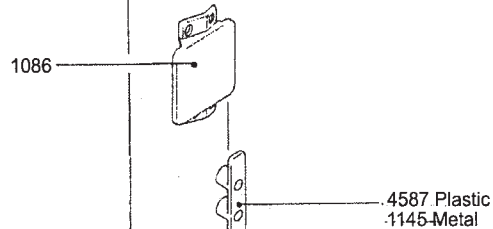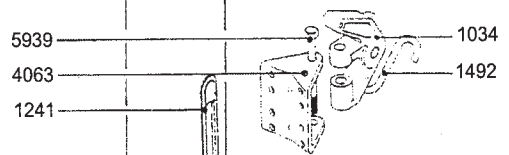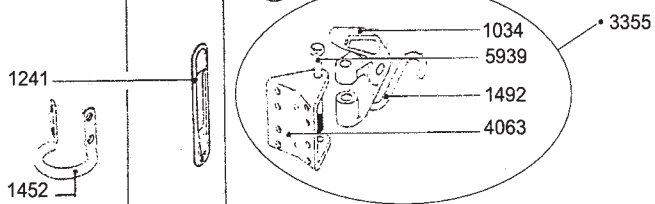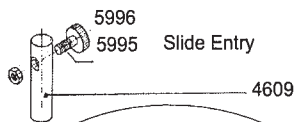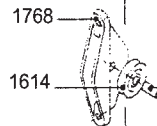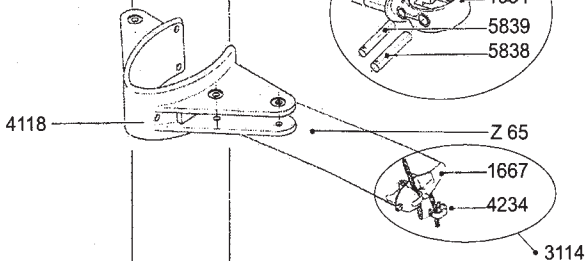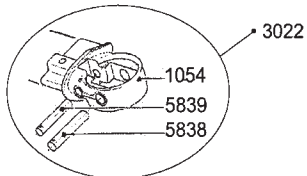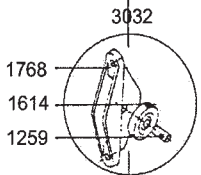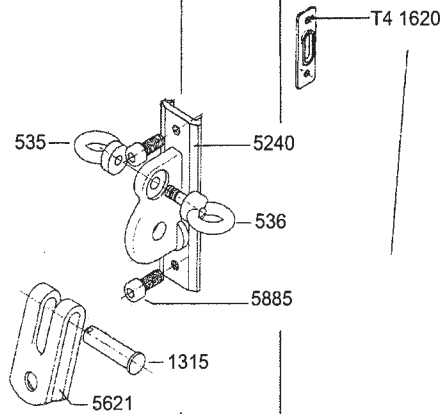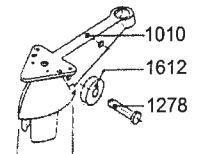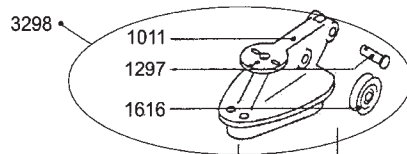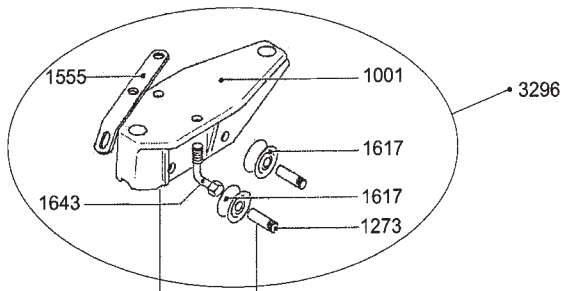


### Z 190

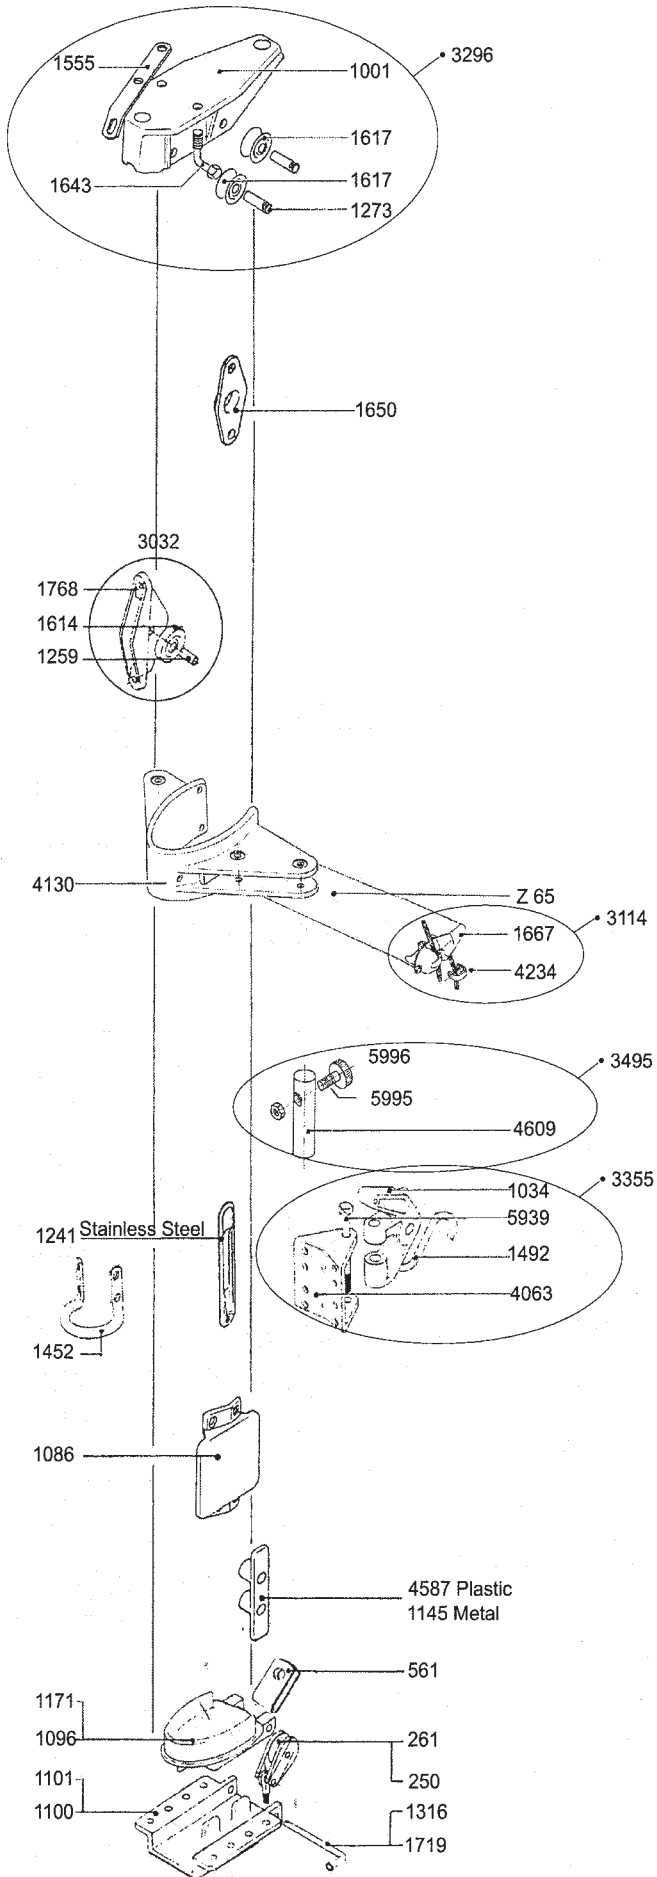

### MASTS

#### Z 190 7/8

#### Z 190 Taper




















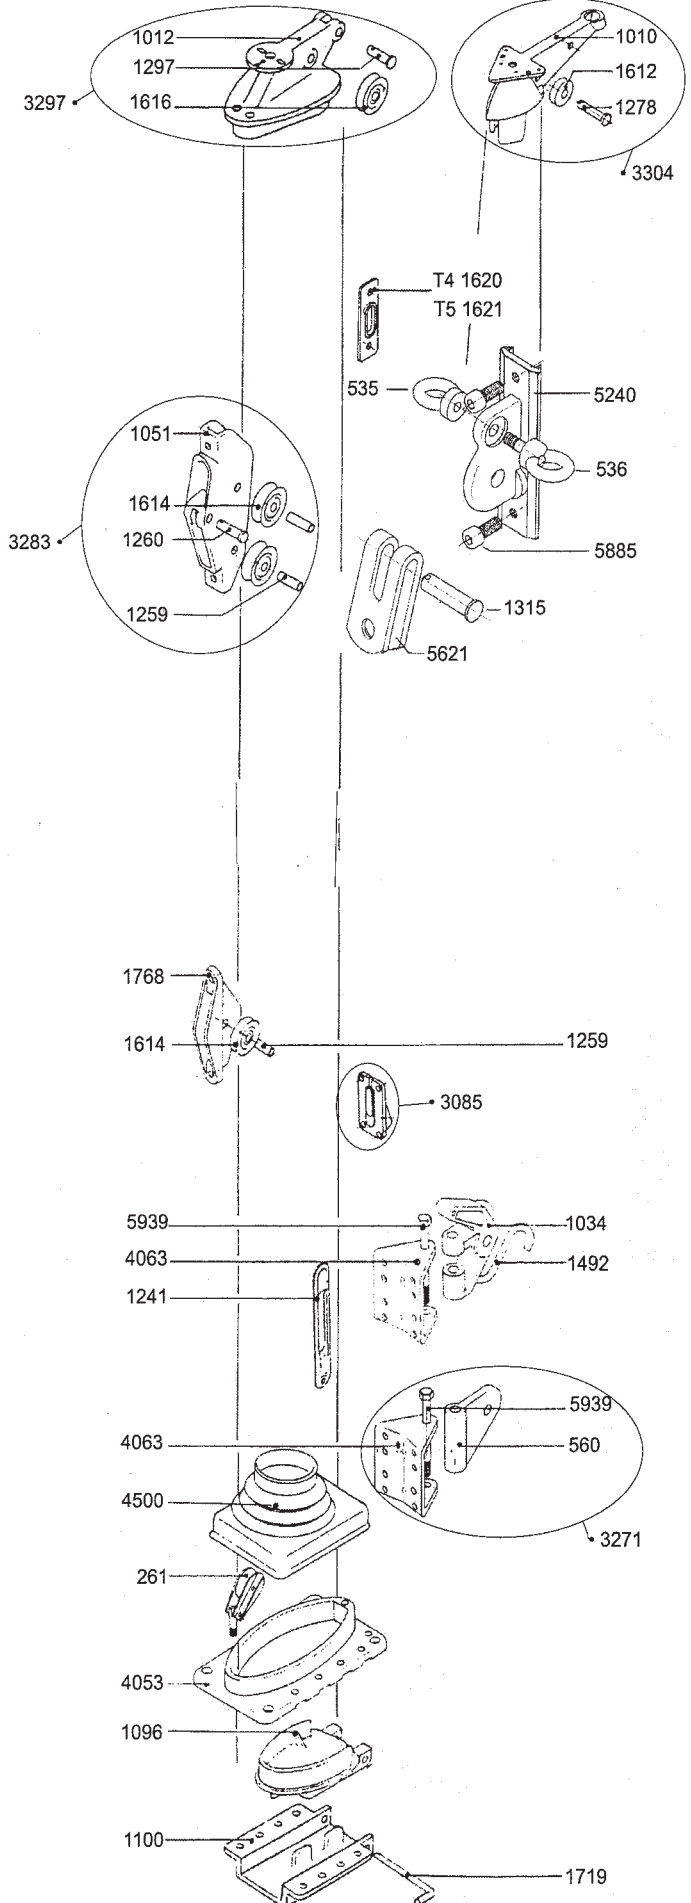


# MASTS

Z 230

Z 230 7/8

Z 230 Taper

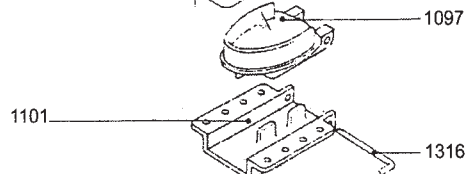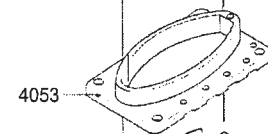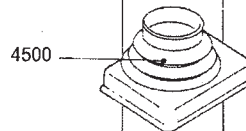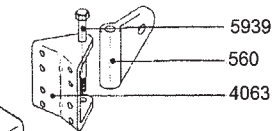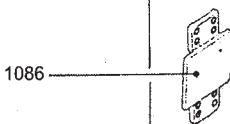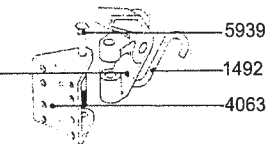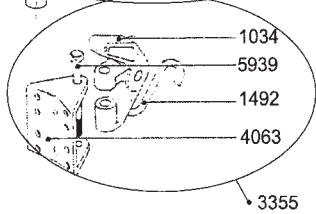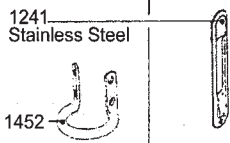
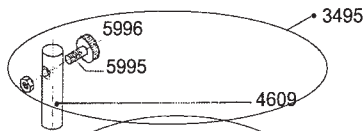
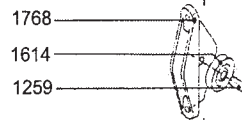
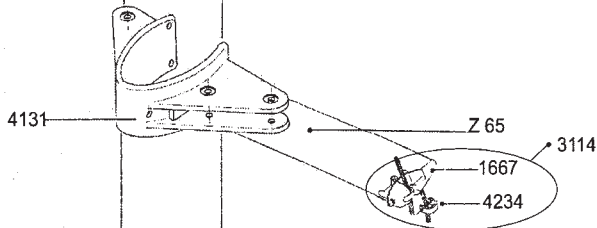
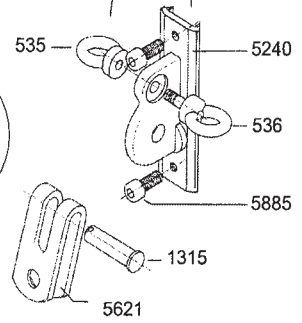
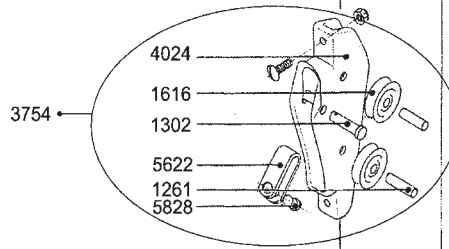
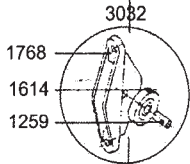
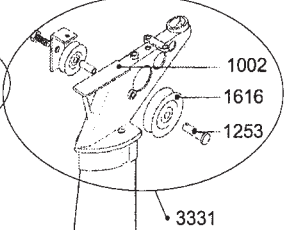
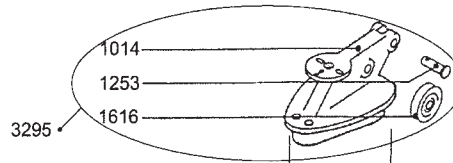
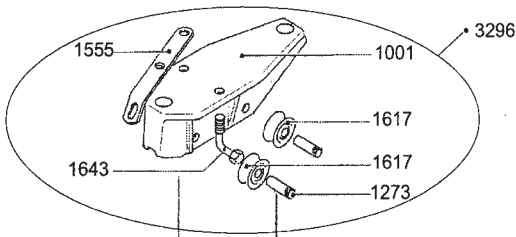


Z 265







MASTS

Z 265 7/8




Z 265 Taper

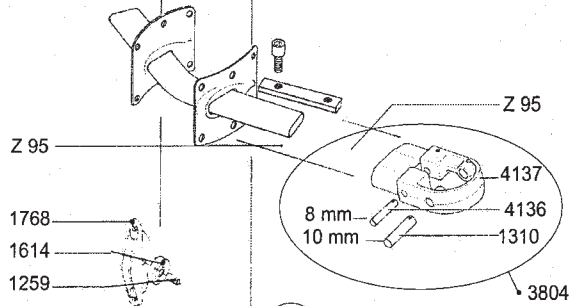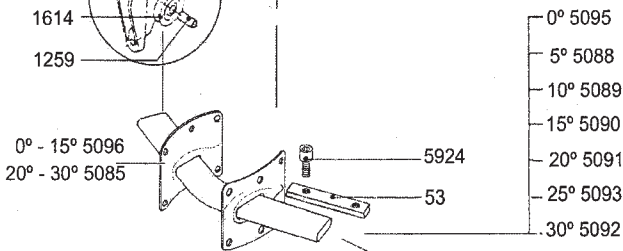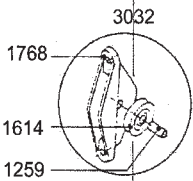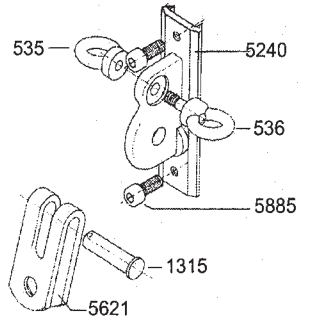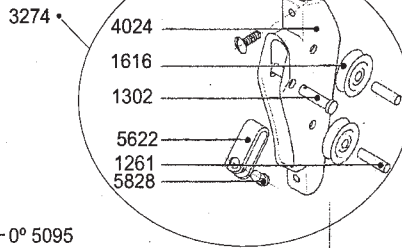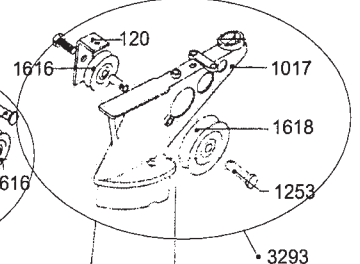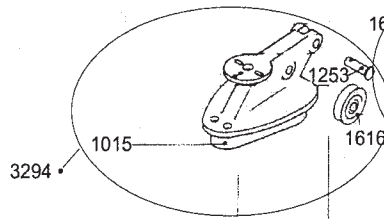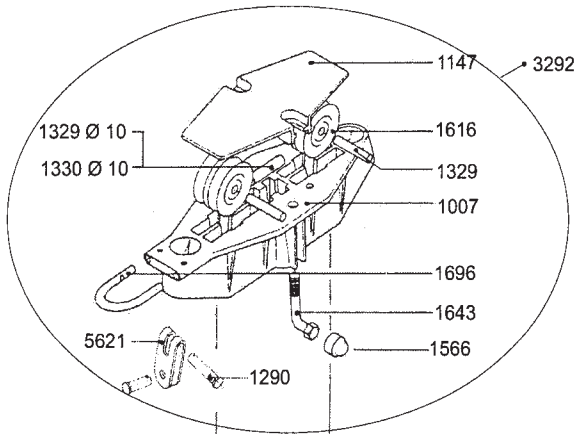



Z 80

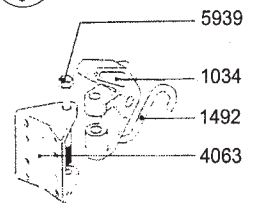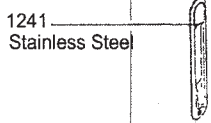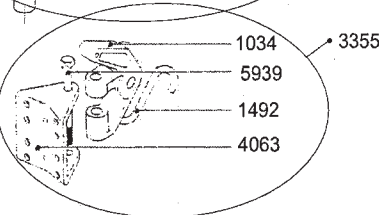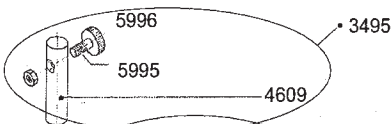

1077







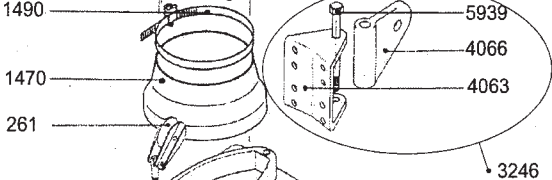

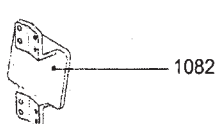


1145 Metal  
4587 Plastic




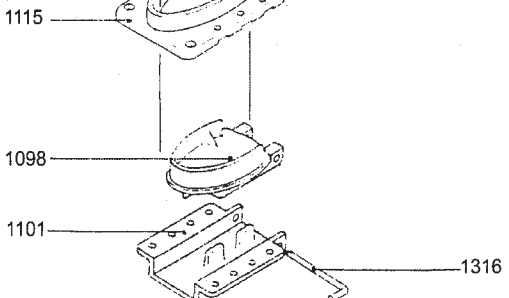
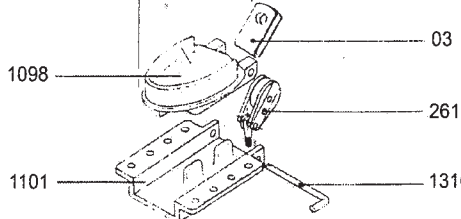


# MASTS

## Z 351

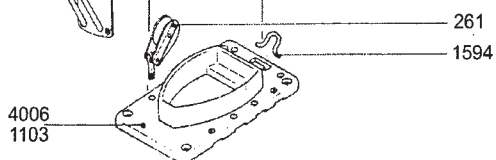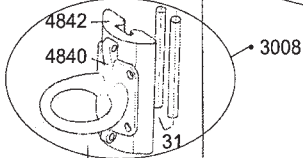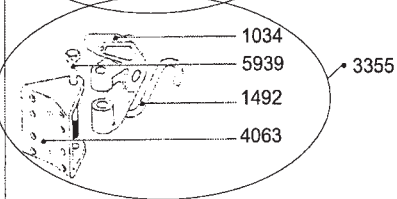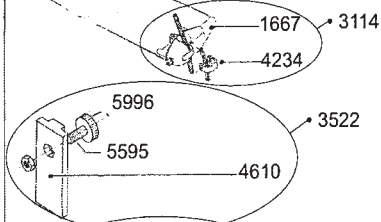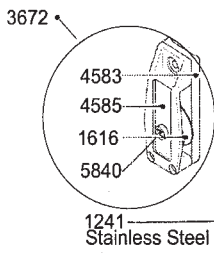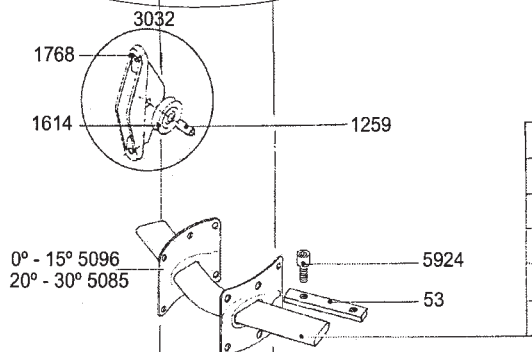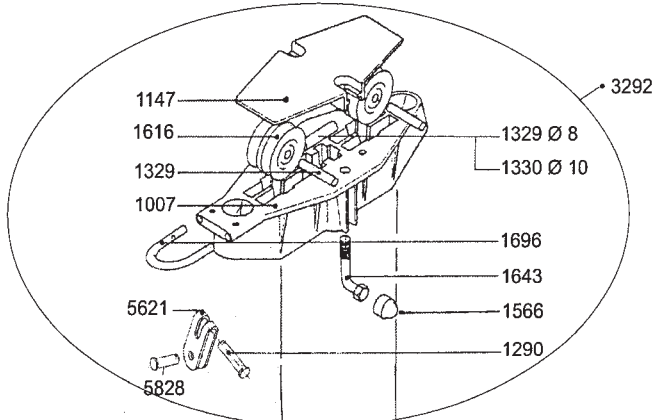

## Z 351 7/8

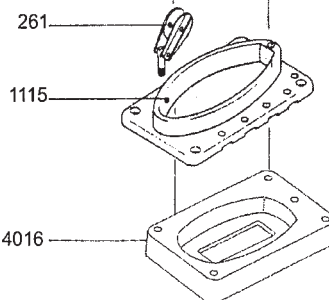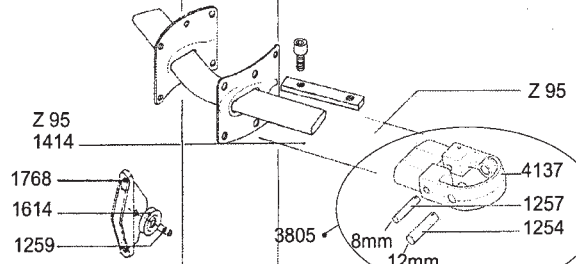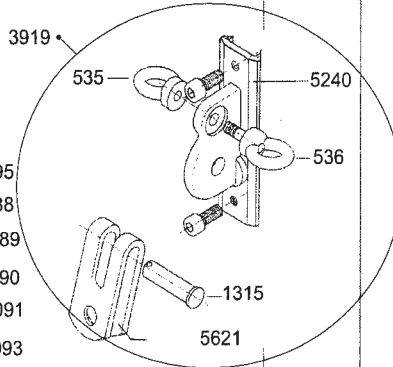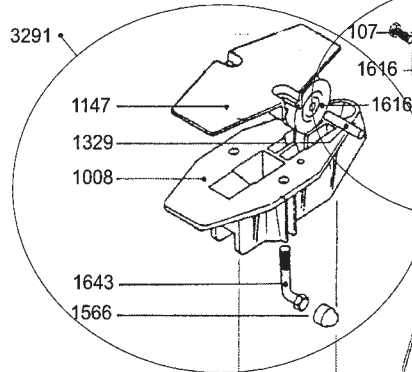

## Z 351 Taper

